



## WIRE WHEEL BALANCING CONE KIT

This guide will help ensure correct balancing of centre-lock wire wheels on an electronic balancer.

It's vital that the hubs are located on the balancing machine in exactly the same way as located on the car.

When fitted to the vehicle the wire wheel is located by its inner and outer coned surfaces and thus runs on its true axis. If the wheel can be located in the same way on the balancing machine it will be balanced running on its true axis and will retain its balance when re-fitted to the vehicle.

