

## Regulator Bag & Housing Fitting Instructions

Only use 30% glycerine / 70% water or an antifreeze & water mix.

**DO NOT** use brake fluid, mineral oil, ATF etc.

The Bag is pre filled & bung inserted

Ensure Hand control unit is in good condition including the internal dome which should be free to spin, lubricate all moving parts & threads.

Before fitting the bag take the hand control unit apart, solder a ¼" o/d pipe over existing pipe. This gives a tighter seal especially at low pressures. Ensure the end of the pipe is rounded & smooth with no scratches down the pipe.

Carefully remove the bung from the bag, lubricate the hole and the pipe with soap, push the bag onto the pipe taking care not to lose liquid out of the bag. With the knob wound fully out screw the hand control unit back together.

Fill the rest of the telecontrol system from the pump reservoir unit and bleed as you would a brake system. Only attach pipework to hand control unit when all pipework is full this is to stop air entering the bag as this is usually the highest point.